



Fuel cap protection kit

Article-No.
019.505-00A

B 80 AmL

Fuel Theft Protection – Mounting the Locking Unit to the Fuel Tank

1



Drill the required holes at the marked positions using the drill attachment. Insert the rivets into the holes and secure them using a rivet tool*.

2



Place the fuel cap cover on the locking unit.

3



Use an Allen key* to tighten the screw.

4



Insert the fuel cap into the locking unit.

5



Close the fuel cap cover and attach the lock*.

*Products are not included in the delivery.